

# AutoLight Magnetic

## Hands Free Window Tint Meter





#### DECLARATION OF CONFORMITY

We, Auto Test Products Pty Ltd. Declare under our sole responsibility that the product AutoLight Magnetic is in conformity with the provisions of the following Council Directive: 1999/5/EC. A copy of the Declaration of Conformity is available from <http://www.autotest.net.au>

© AutoTest Products Pty Ltd (AutoTest) [2024].

Copyright in the drawings, information and data recorded in this document (the information) is the property of AutoTest Products. This document and the information are solely for the use of the authorised recipient and this document may not be used, copied, or reproduced in whole or part for any purpose other than that for which it was supplied by AutoTest Products. AutoTest Products makes no representation, undertakes no duty, and accepts no responsibility to any third party who may use or rely upon this document or the information.

Under no circumstances shall AutoTest Products be responsible for any loss of data or income or any special, incidental, consequential or direct damages howsoever caused. The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability, or contents of this document. AutoTest Products reserves the right to revise this document or withdraw it at any time without prior notice.

---

## PREFACE

Thank you for purchasing AutoTest products. Please read this manual completely before installing and operating the product so as to ensure correct operation of the product. Make certain that this manual can be accessed whenever necessary.

## FOR YOUR SAFETY

Read these simple guidelines. Not following them may be dangerous. Read the complete user guide. Further detailed information is given in this manual.



### SWITCH ON SAFELY

Do not switch the device on when wireless device use is prohibited or when it may cause interference or danger.



### SWITCH OFF WHEN REFUELING

Do not use the device at a refuelling point. Do not use near fuel or chemicals.



### SWITCH OFF NEAR BLASTING

Follow any restrictions. Do not use the device where blasting is in progress.



### USE SENSIBLY

Use only in the positions as explained in the product documentation.



### QUALIFIED SERVICE

Only qualified personnel may install or repair this product.



### ACCESSORIES AND BATTERIES

Use only approved accessories and batteries. Do not connect incompatible products.



### WATER-RESISTANCE

Your device is water-resistant. It is not waterproof



### CONNECTING TO OTHER DEVICES

When connecting to any other device, read its user's guide for detailed safety instructions. Do not connect incompatible products.



### RISK OF DAMAGE TO EYES

Wear safety goggles when operating near vehicle battery as Battery acid, fumes, oil and dust particles might cause damage to the eyes.

---

# Table of Contents

## AutoLight Magnetic

1.	UNPACKING AND FIRST TIME USE .....	1
2.	INSTALLATION AND BATTERY CHANGE .....	1
3.	CHECKING READOUT .....	1
4.	OPERATION.....	2
4.1	Operating Conditions and Set-up.....	2
4.2	Instructions for Use .....	2
5.	TROUBLESHOOTING .....	3
6	CALIBRATION.....	3
7.	SPECIFICATIONS AND SPARE PARTS.....	3
8.	WARRANTY .....	4

---

## 1. UNPACKING AND FIRST TIME USE

Congratulations on your choice of an AutoLight MAGNETIC Tint Meter. Please take the time to read this User's Guide before using the AutoLight MAGNETIC Tint Meter in the field. Incorrect or inappropriate use of this instrument may void the warranty. Retain the packing materials for future shipping and transport of the unit for periodic calibration.

The packing box should contain:

- AutoLight MAGNETIC Tint Meter
- 1 x Glass check sample
- 2 x Energizer Batteries ( 9V )
- USB stick including Manual
- Warranty registration card
- Protective Bag
- Calibration Certificate



## 2. INSTALLATION AND BATTERY CHANGE

Your AutoLight MAGNETIC pack includes two 9-volt Energizer Batteries in the battery compartment accessible from the back of the light source tube. The battery must be connected before initial use. The long-life batteries will provide up to 6 hours of continuous use (approx. 500 tests). If standard batteries are used, anticipate a shorter period of continuous use. This meter is fitted with a low voltage cut out to ensure an accurate power supply to the light source. If the unit fails to operate, replace the batteries.

To replace batteries, remove screw from cover located at the bottom of the light source. Carefully replace both batteries. Close cover.

**NOTE:** Batteries must be disconnected and removed for prolonged storage. The warranty does not cover damage from battery leakage.

## 3. CHECKING READOUT

Using the glass check sample provided, check the light transmission readout by following the three testing steps outlined under '4. OPERATION'. When checking, align the light source and sensor by accurately mounting the sensor tube above the light source with the test glass in between. The light transmission value of the test sample is marked on the sample and should correspond to the reading of AutoLight within  $\pm 3$ .



---

## 4. OPERATION

### 4.1 Operating Conditions and Set-up

AutoLight MAGNETIC has a photocell built into the light sensor tube and a constant light source built into the light source tube. These components are fragile. Care should be taken when handling the unit and should not be dropped or violently shaken. **Avoid taking measurements in strong sunlight** as stray light may affect the reading accuracy. Aim the light source directly at the sensor for an accurate reading. It can be fixed or held onto one of the window surfaces while readings are being taken off the main unit. For best results you should take several readings to ensure consistence across the window.

### 4.2 Instructions for Use

By aligning the light source and sensor on opposing sides of the window to be tested, the percentage of light transmitted through the window is measured.

#### Follow these three easy steps:

**Step 1 - Align** AutoLight MAGNETIC to the side window or windscreen so that the light source and sensor are on opposing sides.

**Step 2 - Activate** After aligning AutoLight MAGNETIC, press the measurement button to take a reading of the light transmitted through the window.

**Step 3 - Annunciate** After the test is completed, the display shows the percentage of light transmitted through the window. AutoLight MAGNETIC reads light transmission as a percentage. Simply compare the reading with the specific value according to your local regulations. The reading will remain displayed for approximately few seconds, before AutoLight MAGNETIC turns off automatically.

Repeat steps for each window area to be tested.



Step 1 – Align



Step 2 – Activate



Step 3 – Read



Step 4 – Document

**\*FOR ALL DOOR WINDOWS: The cable MUST be over the door, as pictured, for the magnets to hold.**



---

## 5. TROUBLESHOOTING

Problem	Troubleshooting
AutoLight MAGNETIC will not turn on	Batteries are discharged, replace batteries
Sample glass not reading $\pm 3\%$ from the glass value	Clean glass with a soft cloth
Light gobe not working	Return AutoLight MAGNETIC for servicing
AutoLight MAGNETIC turns off during use	Batteries have discharged, replace batteries

For other problems, contact AutoTest Products. Repairs should only be carried out by AutoTest Products Pty Ltd in order to ensure the product retains its calibration.

## 6. CALIBRATION

AutoLight MAGNETIC will require calibration at intervals of one year or as required by your local authority. Calibration can only be carried out by AutoTest Products Pty Ltd

## 7. SPECIFICATIONS AND SPARE PARTS

**Standards:** Confirms with ISO 3538 : 1997

**Battery:** 2 x Energizer Batteries ( 9 Volt )

**Light Source Output:** 2856°K + 50°K, confirming to C.I.E. Standard illuminant A

**Lamp Voltage:** Stabilised within + 0.1%

**Sensor Spectral sensitivity:** confirming to photopic curve  $V(\lambda)$  of relative illuminous

**Efficiency of the C.I.E. 1931 standard observer for photopic vision**

**Display:** LED readout 0 - 100%, linear from 20 - 100%,  $\pm 3\%$

**The following spare parts can be obtained from AutoTest Products:**

- Calibrated glass sample
- PDF Manual
- Batteries (2 x 9v)
- Protective Bag

---

## 8. WARRANTY

When you purchase an AutoTest Product you are required to complete warranty registration form, and return to AutoTest Products Pty Ltd within 10 days of purchase of the product. AutoTest Products or any Authorised AutoTest Service Centre warrants this product against defects in material and workmanship for a period of 12 months from the original date of purchase. This warranty applies only to products and components supplied by AutoTest Products which can be identified by the trade name or logo affixed to them or by other documents. AutoTest Products does not warrant any products not supplied by AutoTest Products.

Note: The use of proper paper is very important to the operation of the printer. Use of non-standard paper will jam the printer and/ or wear the print head. Use of non- standard paper will void the warranty. Paper and printer ribbon cartridge are available from Autotest Products.

During the warranty period, AutoTest Products or any Authorised Service Centre will repair (or at its option replace), any defective component(s) without charge for parts or labour, provided the product is freight prepaid, to an authorised AutoTest Service Centre. Transit insurance and return freight will be at the owner's expense.

AutoTest Products or any Authorised AutoTest Service Centre reserves the right to refuse warranty repair if accident, abuse, misuse or misapplication has damaged the product. In transit or as a result of service or modifications by other than an Authorised Service Centre, nor are any other warranties expressed or implied, including any regarding merchantability or fitness for any other particular purpose.

AutoTest Products or an Authorised Service Centre is not responsible for incidental or consequential damages resulting from the breach of any express or implied warranty, including damage to property and, to the extent permitted by law, damages for personal injury.

(Express exclusions from warranty) Unless otherwise specified, this warranty does not cover:

1. Modified, abused, neglected, accidentally damaged or excessively worn products, or products that have become damaged or defective as a result of improper use.
2. Repairs attempted or made by other than our regional repair centre or authorised warranty service centre.
3. Conditions or malfunctions caused by the reasonable effects of fair wear and tear or the malfunction of normally wearing parts, which include but are not limited to: Batteries, plugs and leads.
4. Consumable items, such as batteries (beyond 3 months from date of purchase).
5. AutoTest products that are not distributed through AutoTest's authorised distributors and resellers.

(Warranty non-transferrable) This warranty is not transferrable beyond the original purchaser. Warranty is subject to AutoTest Products Standard Terms & Condition Published widely.



---

**NOTES:**

---

Copyright 2024 AutoTest Products Pty Ltd ABN 47 005 712 005.

© denotes a trademark owned by AutoTest Products Pty Ltd ABN 47 005 712 005.



**AUTOTEST Products Pty Ltd**

69 Parsons St Kensington VIC 3031 Australia  
Phone: (+61 3) 8840 3000

Service: (+61 3) 8840 3016    [service@autotest.net.au](mailto:service@autotest.net.au)

Sales: (+61 3) 8840 3017    [sales@autotest.net.au](mailto:sales@autotest.net.au)

[www.autotest.net.au](http://www.autotest.net.au)